TURBO OUTRUN U/R CVT
NEW PARTS AND REPLACEMENT PARTS

Ⓐ 423-0116
DESIGN PL TURBO OUTRUN U/R

④ 422-0300
PLAY INSTR ST
TURBO OUTRUN U/R

421-7456 ③
STKR TURBO BTN

421-7453
STKR TURBO ①
L

421-7455
② STKR TURBO
M
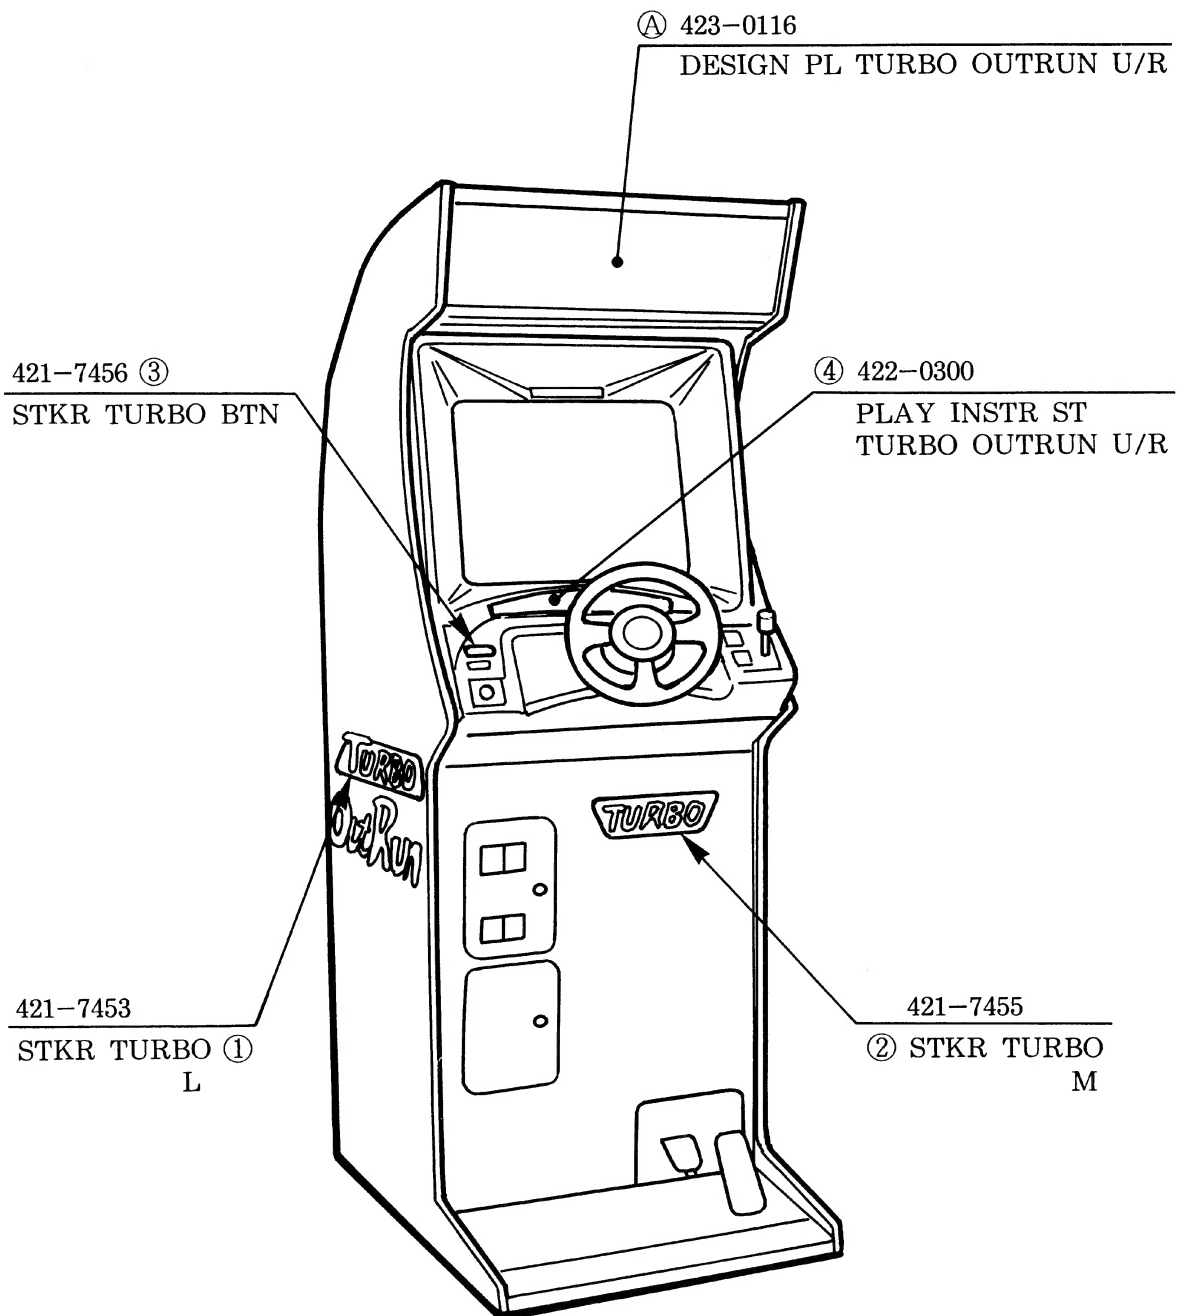
1. Apply STICKER ① (one each on the right and left sides), and one each of ②, ③ and ④ to the applicable positions as shown.

2. Then, replace the Ⓐ parts.

TURBO OUT RUN (834−6919−12)

COIN/CREDIT OPTION SWITCH SETTING   DIP SWITCH A

GAME PRICE SETTING	DIP SWITCH A							
	1	2	3	4	5	6	7	8
1 COIN 1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN 2 CREDITS	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
1 COIN 3 CREDITS	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
5 COINS 1 CREDIT	ON	ON	OFF	OFF	ON	ON	OFF	OFF
6 COINS 1 CREDIT	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
1 COIN 6 CREDITS	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2 COINS 1 CREDIT	OFF	ON	ON	OFF	OFF	ON	ON	OFF
3 COINS 1 CREDIT	ON	ON	ON	OFF	ON	ON	ON	OFF
4 COINS 1 CREDIT	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
2 COINS 3 CREDITS	ON	OFF	OFF	ON	ON	OFF	OFF	ON
6 COINS 4 CREDITS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
4 COINS 3 CREDITS	ON	ON	OFF	ON	ON	ON	OFF	ON
5 COINS 6 CREDITS	OFF	OFF	ON	ON	OFF	OFF	ON	ON
4 COINS 5 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
2 COINS 3 CREDITS	OFF	ON	ON	ON	OFF	ON	ON	ON
FREE PLAY	ON	ON	ON	ON	ON	ON	ON	ON
	COIN SW #1				COIN SW #2			

GAME OPTION SWITCH SETTING   DIP SWITCH B

|	GAME OPTION SETTING	1	2	3	4	5	6	7	8
※1 ※2	※CABINET TYPE								
	MOVING	OFF	OFF						
	UPRIGHT	ON	OFF						
	MINI UPRIGHT	OFF	ON						
	COCKPIT	ON	ON						
	※ADVERTISE SOUND								
	OFF			OFF					
	ON			ON					
	※TURBO SW								
	USE TURBO SHIFTER				OFF				
	USE START BUTTON				ON				
	※INITIAL, CONTINUE, CREDIT								
	2 1					OFF	OFF		
	3 2					ON	OFF		
	1 1					OFF	ON		
	2 2					ON	ON		
	※GAME DIFFICULTY								
	NORMAL							OFF	OFF
	EASY							ON	OFF
	HARD							OFF	ON
	HARDEST							ON	ON

NOTE : CABINET TYPE

※ 1 : UPRIGHT SETTING applies to UPRIGHT CVT and COCKPIT CVT,
      and is displayed as COCKPIT CVT on the TEST MODE screen.

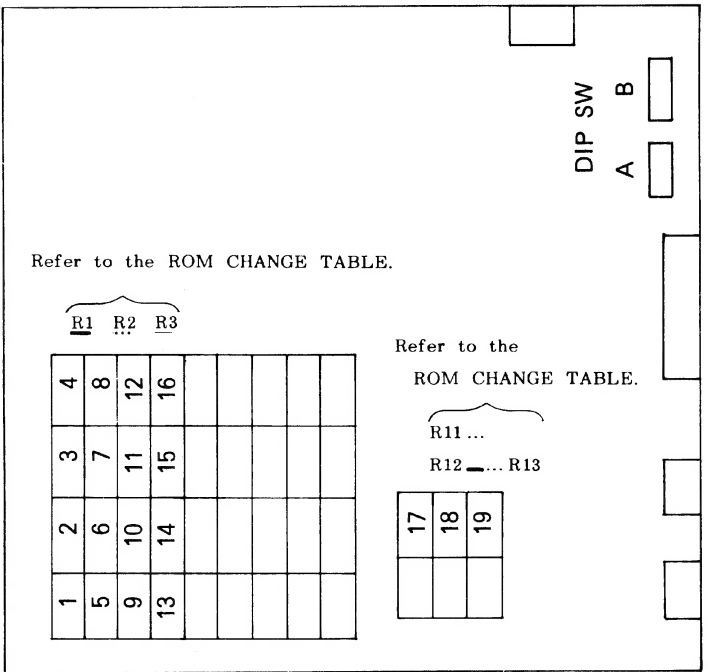※ 2 : With the COCKPIT setting, the handle does not vibrate.

ROM LOCATIONS

GAME BD TURBO OUT RUN

834-6919-12
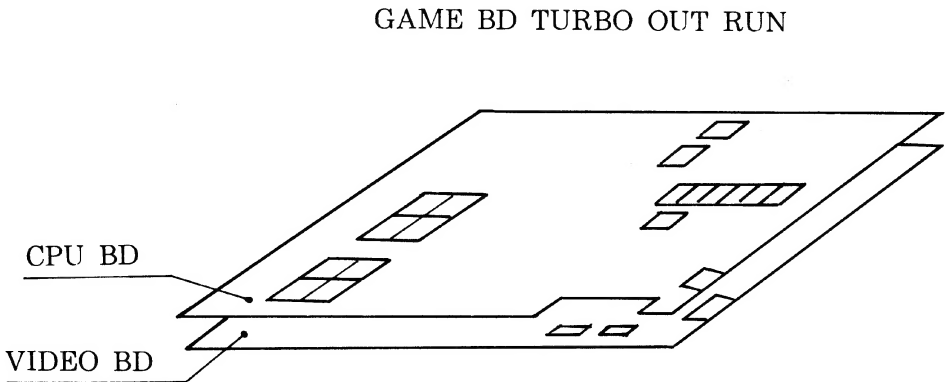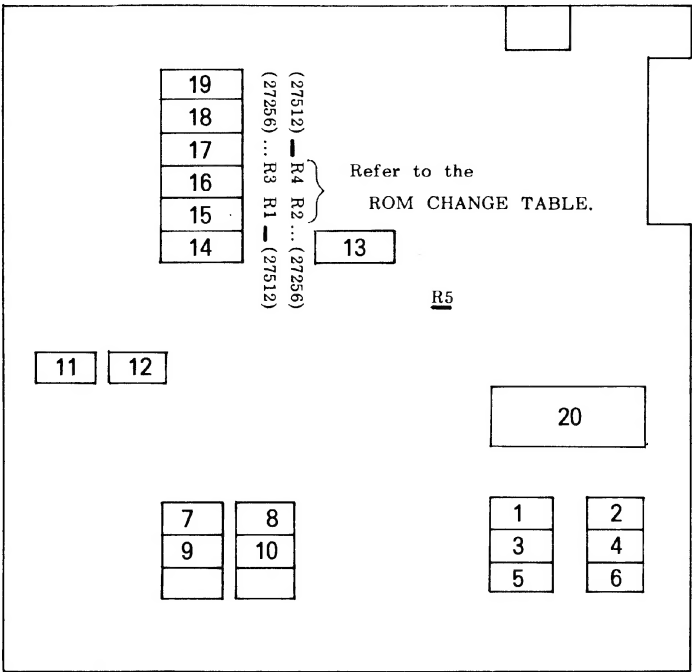
CPU BD

VIDEO BD

To change to the TURBO OUT RUN from the OUT RUN, the ROM replacement, and the jumper changes as shown below are required.

CPU BD 837-6905-12

19
18
17
16
15
14

(27512) ... R4 R2 ... (27512)
(27256) ... R3 R1 ... (27256)
(27512)

Refer to the ROM CHANGE TABLE.

13

R5

11 12

20

7 8
9 10

1 2
3 4
5 6

VIDEO BD 837-6906-02

DIP SW A B

Refer to the ROM CHANGE TABLE.

R1 R2 R3

Refer to the ROM CHANGE TABLE.

R11 ...
R12 ... R13

421-7457-02 (D-2/2)

CPU BD 837-6905-12

CPU BD	R1	R2	R3	R4	R5	ROM TYPE
SOUND PROGRAM	JUMPER	CUT			JUMPER	27512
SOUND DATA			CUT	JUMPER	JUMPER	27512

VIDEO BD 837-6906-02

VIDEO BD	R1	R2	R3	R11	R12	R13	ROM TYPE
OBJECT	JUMPER	CUT	CUT				1M
SCROLL				CUT	JUMPER	CUT	27512

	IC No.	CPU BD	SIZE	837-6905-12
1	118	MAIN		EPR-12512
2	133			" -12513
3	117			" -12514
4	132	PROGRAM		EPR-12515
5	116		512	" -12292
6	131		-20	" -12293
7	58	SUB		OPR-12294
8	76			" -12295
9	57	PROGRAM		" -12296
10	75			OPR-12297
11	11	ROAD DATA	256	EPR-12298
12	47		-25	EPR-12298
13	88	SOUND PROGRAM		EPR-12300
14	66			OPR-12301
15	67	SOUND		" -12302
16	68		512	" -12303
17	69		-25	" -12304
18	70	DATA		" -12305
19	71			OPR-12306
20	121	SECURITY CPU 68000		317-0118

	IC No.	VIDEO BD	SIZE	837-6906-02
1	9			MPR-12336
2	10			" -12337
3	11			" -12338
4	12			" -12339
5	13			" -12364
6	14			" -12365
7	15	OBJECT		" -12366
8	16		1M	" -12367
9	17	DATA	-20	
10	18			
11	19			
12	20			
13	21			
14	22			
15	23			
16	24			
17	102	SCROLL	512	OPR-12323
18	103	DATA	-25	" -12324
19	104			" -12325